



Laminate Floors Maintenance & Care Guide



1. Daily Cleaning & General Care

- **Dust & Dirt Removal**

Sweep or vacuum regularly using a soft broom or a vacuum cleaner without a beater bar to prevent scratching.

- **Damp Mopping**

Clean using a damp mop (not wet). Use a neutral pH laminate floor cleaner. Avoid excessive water and do not use abrasive or wax-based cleaners.

- **Spill Management**

Although the flooring is waterproof, we recommend cleaning spills immediately to prevent seepage into joints or edges.

2. What to Avoid

- Do **not** leave standing water on the floor.
- Do **not** use abrasive pads, steel wool, or harsh chemicals.
- Avoid dragging heavy or sharp objects directly on the floor.
- Do **not** wax or polish the floor.



3. Furniture & Surface Protection

- Use **felt pads or rubber caps** on furniture legs to prevent scratches.
- Always **lift** furniture when moving it—never drag.
- For wheeled chairs or furniture, use **soft rubber wheels** and protective mats when necessary.

4. Environmental Conditions

- **Recommended Temperature:** 59°F – 86°F (15°C – 30°C)
- **Recommended Humidity:** 40% – 70%
- Maintain proper ventilation and avoid direct exposure to strong sunlight.

5. Periodic Maintenance Schedule

Task	Frequency	Notes
Sweeping/Vacuuming	Daily or as needed	Prevents buildup of dust and grit
Damp Mopping	1–2 times per week	Use soft mop and neutral cleaner
Deep Cleaning	Every 3 months	Use specialized laminate floor cleaner
Edge Inspection	Every 6 months	Check for signs of lifting or separation



6. Additional Notes

- Do not apply floor wax or polish.
- Use breathable, non-rubber-backed mats to avoid moisture trapping.
- Damaged planks can usually be replaced individually—contact us for service.

This care guide applies to our waterproof laminate flooring collections only. Specific products may have unique instructions. Please refer to product-specific documentation or contact your flooring representative for further information.